

Examples

mode

Current date and real time input or change

Example: Date 01.02.2000; time 14:00 after Reset



O.K. 1x
◆ 1x

 


O.K. 2x
◆ 2x




O.K. 2x

O.K. 1x
◆ 1x



O.K. 1x
◆ 4x

 

O.K. 3x

Mode PR

Programming day or week programme

Several possibilities:

1. Single day, one channel
2. Several days, one channel.
3. Single day, several channels
4. Several days, several channels.

Example: Tuesday (2) and Thursday (4) to Sunday (7);

 
Switching time 19:00;

Channel A ON; Channel B IMPULSE 05 sec.


Start from: AUTO mode

○ 1x

O.K. 1x




◆ 1x
O.K. 2x

 

◆ 1x
O.K. 1x



 O.K. 4x
◆ 1x



O.K. 1x
◆ 9x



O.K. 3x
◆ 1x



O.K. 1x
◆ 3x



O.K. 2x
◆ 5x



O.K. 1x



Continue with input of further dates / functions or press

○ key 1x to return to AUTO mode.

Red: Flashing symbol in display

PR mode

 
Holiday programming
Start and End programming by date

Programming for certain channels (permanently ON / OFF), while others carry out the week programme.

Example: Start: 20.04
End: 24.04
Channel B OFF (permanent)

Start from: AUTO mode

○ 1x
O.K. 1x



◀ 1x



 
◆ 2x



O.K. 3x
◆ 4x



O.K. 1x
◆ 2x



O.K. 1x
◆ 4x



O.K. 2x
◆ 4x



O.K. 2x
◆ 2x



Example
2 channel
clock

O.K. 1x



Continue with input of further dates / functions or press ○ key 1x to return to AUTO mode.

The holiday programme does not occupy a storage location.

By input a new holiday programme the old holiday programme is overwrite.

The holiday programme is clear at the end of the holiday programme and the outputrelais goes into the state of the switching programme. (Programme review)

S/W mode

Deactivate automatic summertime changes (daylight saving)

 
The default setting on delivery, S/W time change is activated.

Start from: AUTO mode

○ 4x
O.K. 1x



◆ 1x



O.K. 1x



The S/W -
time
change is
deactivated

The time changeover is executed automatically according to the „European Regulation“.

Start: Last Sunday in March
End: Last Sunday in October

? mode

Display or alter switching times

Example: Alter Tuesday and Thursday to Sunday 19:00;

Channel A ON; Channel B IMPULSE

into : Wednesday to Sunday 19:30;
Channel A ON; Channel B ON

Start from: AUTO mode

○ 2x
O.K. 1x



Number of
free storage
locations
available

O.K. 3x



◆ 1x



O.K. 1x
◆ 1x



O.K. 1x
◆ 1x



O.K. 7x
◆ 3x



O.K. 3x



◆ 2x



O.K. 1x



Number of
free storage
locations
available

○ 1x



? mode

Cancel function

Example: Cancelling holiday programme
Start: 20.04 End: 24.04

Start from: AUTO mode

○ 2x
O.K. 1x



Number of
free storage
locations
available

O.K. 1x



CL 1x



○ 1x



If CL key is pressed twice while free storage locations available are displayed, all inputs are cancelled. (Clear all)